




# INSTALLATION INSTRUCTIONS

**PART No.**

**KEN30723**

**Jeep® TJ and JK Wrangler  
Hood Bumper Delete Kit**

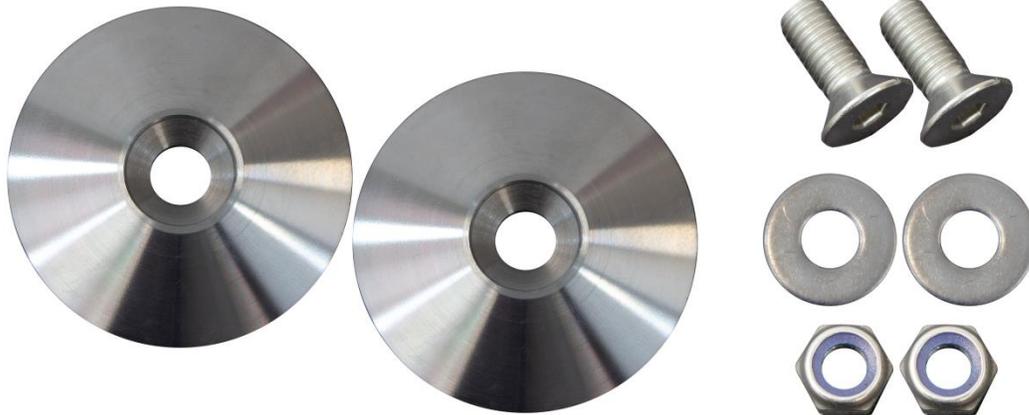

## REQUIRED TOOLS

10mm Socket  
13mm Socket  
Ratchet  
5mm Allen

## KIT CONTAINS

Hood Bumper Delete  
M8 SS Washer  
M8-1.25 SS Nyloc Nut  
M8-1.25x20mm SS Countersunk Bolt

## QTY

2  
2  
2  
2

KEN3072300



# INSTALLATION INSTRUCTIONS

**PART No.**

**KEN30723**

**Jeep® TJ and JK Wrangler  
Hood Bumper Delete Kit**

## REMOVAL


Open your hood and prop it open with its hood prop rod.



Peel back the heat shield enough to gain access the hood bumper nuts.



With a 10mm socket, hold the bumper with one hand and unscrew and remove the nut. Repeat on the opposite side.

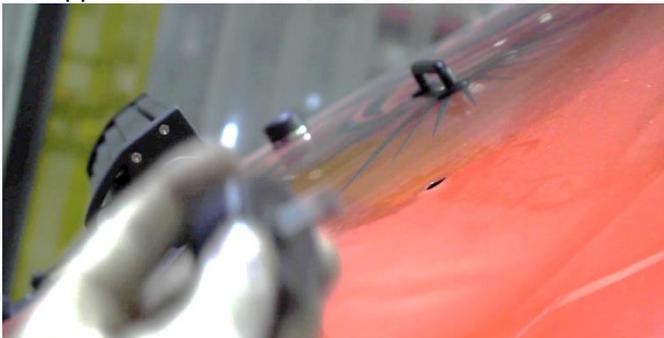

 For TJ Wranglers, simply pull the bumpers off and away

On Jeep TJ you would only need to pry out the hood bumper.

## INSTALL

Place the delete into the hood and support it with one hand.



With the other, secure a washer and a nut to the countersunk bolt. With a 13mm socket and 5mm allen key, tighten the nut and repeat on the opposite side.





# INSTALLATION INSTRUCTIONS

**PART No.**

**KEN30723**

**Jeep® TJ and JK Wrangler  
Hood Bumper Delete Kit**



**ENJOY YOUR NEW KENTROL HOOD BUMPER  
DELETE!!!**

