



INSTALLATION INSTRUCTIONS

PART No.

FB22389

**19-21 Chevy Silverado
Front Bumper**



VIDEO AVAILABLE



REQUIRED TOOLS

17mm Socket

KIT CONTAINS

Front Bumper

Winch Plate

Bumper Brackets

M10 Hex Bolt

M10 Washer

M10 Hex Nut

QTY

1

1

2

10

20


10

2137400

Install the winch plate onto the frame using the factory hardware the shown bolt location on each side.

1) REMOVE EXISTING BUMPER

Begin removing your vehicle's existing front bumper. We show how to do this in another video over at www.fishboneoffroad.tv

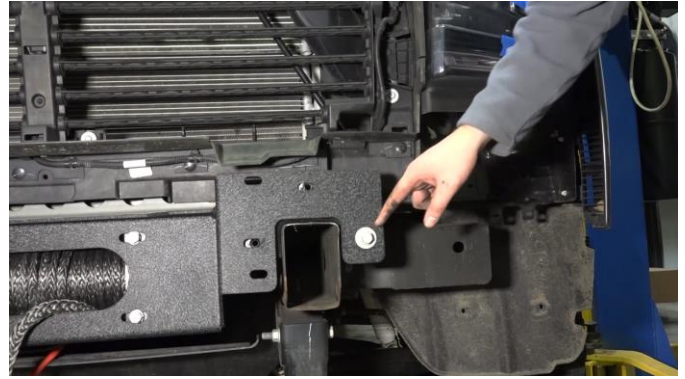

Install the bumper brackets with the remaining factory hardware and the included hardware with a 17mm socket.

2) INSTALL WINCH AND LIGHTS

Begin installing your winch, pod lights, and light bar as shown.



3) INSTALL THE BUMPER

With the help of a friend and the remaining included hardware, loosely secure the bumper to the bumper brackets. Adjust and center the bumper, and tighten down the bolts with a 17mm socket.

