



INSTALLATION INSTRUCTIONS

PART No.

FB22399

**Dodge 2019+ Ram 1500
Pike Rear Bumper**



REQUIRED TOOLS

3mm Hex Wrench
4mm Hex Wrench
8mm Wrench
19mm Wrench
10mm Socket
18mm Socket
7mm Socket

KIT CONTAINS

Pike Rear Bumper
Pod Light Bracket
M6x1mm Hex Bolt
M6x1mm Hex Nut
M12x1.75mm Hex Bolt
M12 Flat Washer
M12x1.75mm Hex Nut
M5 Screw
M5 Hex Nut
M6 Bolt

QTY

1
2
8
14
4
8
4
2
2
10

2239900

1) PREPARE YOUR BUMPER

Remove your factory rear bumper, sensors, and trailer plug, and install them into the new bumper. Note that the sensors will need to be installed in the same position and order that they came in from the factory. Secure them into their respective brackets with a 7mm socket. Do not over tighten. Use the holes and openings, along with zip-ties, to keep the cord secure.



Install your pod lights with the included M6 hardware and a 4mm wrench and 10mm socket. Flush mounted lights (lights with a face plate) may be secured normally, but cube lights will require the included light brackets.



Install your park assist module with a 3mm and 8mm wrench, if applicable.



Install your factory license plate lights and trailer plug, and be sure to not over tighten the factory hardware.




Look to see where your vehicle's exhaust pipes are located. Depending if you have a dual exhaust, remove the included exhaust covers accordingly.



2) INSTALL

With the help of a friend, raise the bumper up to the vehicle frame, and loosely secure the bumper with the included M12 bolts, washers, and nuts, with a 19mm and 18mm wrench/socket.

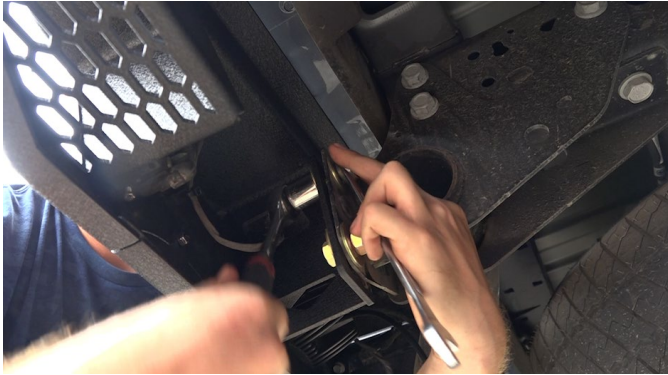

Adjust the height of the bumper as desired while making sure the tailgate doesn't hit, and tighten down the hardware.

Finally, plug in the license plate lights, sensors, and trailer plug power harnesses.